


**110-002 Power Door Locks**  
(Crew Cab Only, Without Keyless Entry)

**Connector: C503**, Color='BK', Terminal='16'

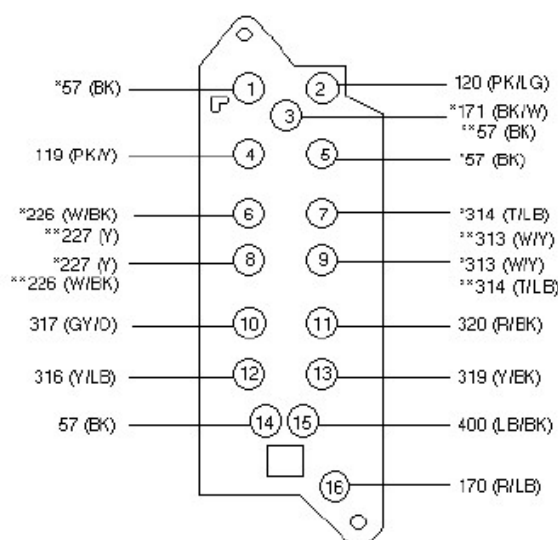

\* WITHOUT KEYLESS ENTRY  
\*\* WITH KEYLESS ENTRY

**C503 MASTER WINDOW/DOOR LOCK CONTROL SWITCH (CREW CAB)**

| PIN | CIRCUIT      | CIRCUIT FUNCTION  | PIN | CIRCUIT      | CIRCUIT FUNCTION  |
|-----|--------------|---|-----|--------------|---|
| 1   | *57 (BK)     | Ground Circuit  | 8   | **226 (W/BK) | LF Window Regulator Switch to LF Window Regulator Motor |
| 2   | 120 (PK/LG)  | Door Lock Switch (Unlock)                               | 9   | *313 (W/Y)   | LF Window Regulator Switch to RF Window Regulator Motor |
| 3   | *171 (BK/W)  | Circuit Breaker to Seat Latch Relay                     |     | **314 (T/LB) | LF Window Regulator Switch to RF Window Regulator Motor |
|     | **57 (BK)    | Ground Circuit  | 10  | 317 (GY/O)   | LF Window Regulator Switch to LR Window Regulator Motor |
| 4   | 119 (PK/Y)   | Door Lock Switch (Lock)                                 | 11  | 320 (R/BK)   | LF Window Regulator Switch to RR Window Regulator Motor |
| 5   | *57 (BK)     | Ground Circuit  | 12  | 316 (Y/LB)   | LF Window Regulator Switch to LR Window Regulator Motor |
| 6   | *226 (W/BK)  | LF Window Regulator Switch to LF Window Regulator Motor | 13  | 319 (Y/BK)   | LF Window Regulator Switch to RR Window Regulator Motor |
|     | **227 (W/BK) | LF Window Regulator Switch to LF Window Regulator Motor | 14  | 57 (BK)      | Ground Circuit  |
| 7   | *314 (T/LB)  | LF Window Regulator Switch to RF Window Regulator Motor | 15  | 400 (LB/BK)  | Ignition (Hot in Acc or Run)                            |
|     | **313 (W/Y)  | LF Window Regulator Switch to RF Window Regulator Motor | 16  | 170 (R/LB)   | Window Lock Switch                                      |
| 8   | *227 (Y)     | LF Window Regulator Switch to LF Window Regulator Motor |     |              |   |