


## REMOVAL AND INSTALLATION

### Exhaust Gas Temperature (EGT) Sensor

#### Material

Item	Specification
Penetrating and Lock Lubricant XL-1 (US); CXC-51-A (Canada)	—

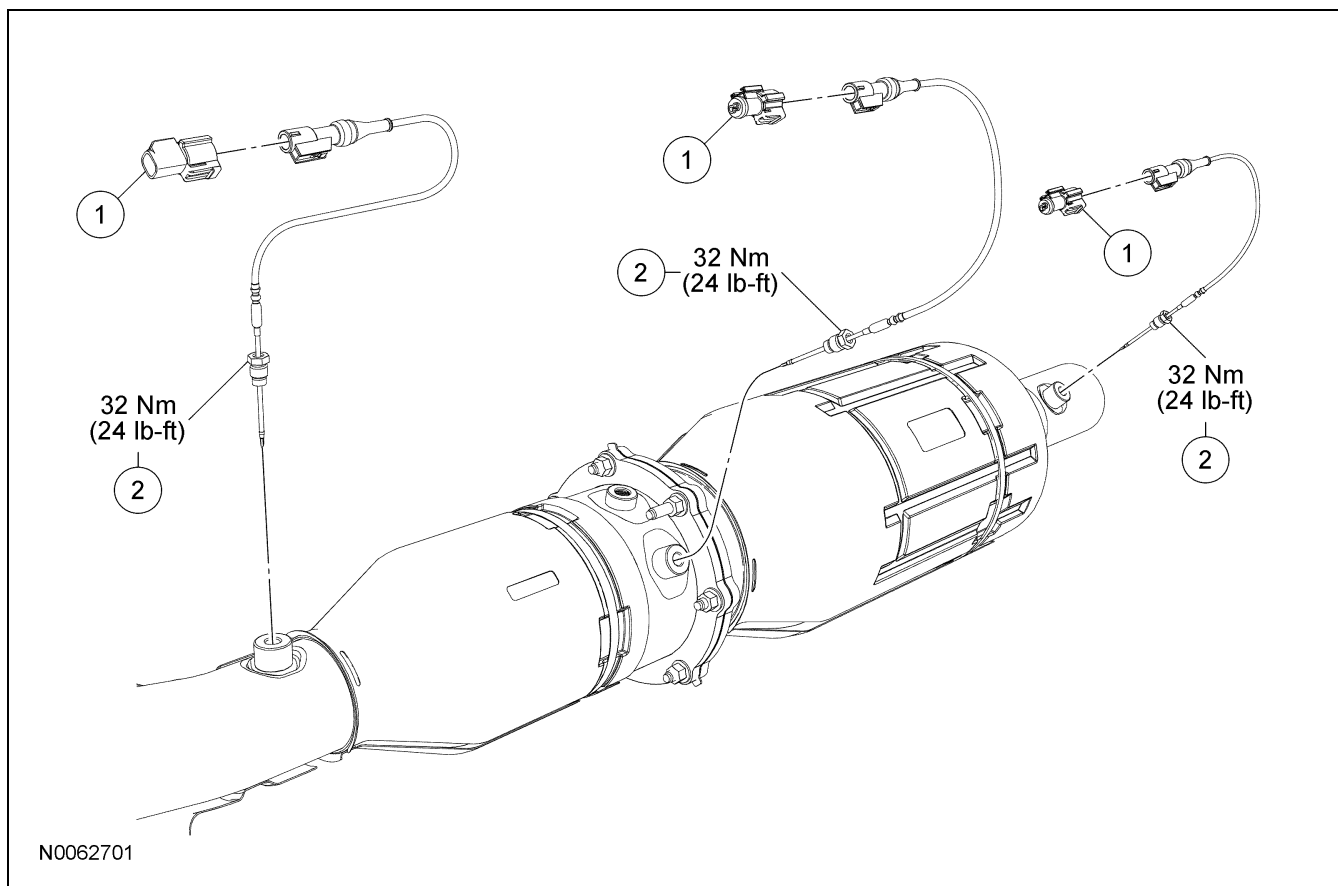

Item	Part Number	Description
1	14A464	Exhaust gas temperature (EGT) sensor electrical connectors
2	12B591	EGT sensors

2. **CAUTION:** Make sure the ignition switch is in the OFF position prior to working on the electronic engine controls or the vehicle may be damaged.

Turn the ignition switch to the OFF position.

3. Disconnect the appropriate exhaust gas temperature (EGT) sensor electrical connector.

#### Removal and Installation

1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to Section 100-02.


---

**REMOVAL AND INSTALLATION (Continued)**

4. **NOTE:** If necessary, lubricate the exhaust gas temperature (EGT) sensor with penetrating and lock lubricant to ease removal.

Remove the inoperative EGT sensor.

- To install, tighten to 32 Nm (24 lb-ft).

5.  **CAUTION:** If the exhaust gas temperature (EGT) sensor bends during installation, do not straighten the EGT sensor or it may be damaged.

To install, reverse the removal procedure.

---