


POWER DISTRIBUTION 13-24


1997 F-250 HD/350/SUPER DUTY

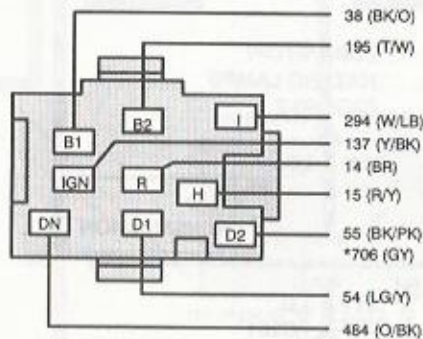

* W/REMOTE KEYLESS ENTRY, ANTI-THEFT

C273
MAIN LIGHT SWITCH

PIN	CIRCUIT	CIRCUIT FUNCTION
B2	195 (T/W)	B+ to Main Light Switch
B1	38 (BK/O)	B+ to Main Light Switch
D1	54 (LG/Y)	Interior Lamp Switch Feed
D2	55 (BK/PK) *706 (GY)	Courtesy Lamp Switch to Courtesy Lamp
H	15 (R/Y)	Headlamp Dimmer Switch Feed
I	294 (W/LB)	Instrument Panel Lamps Feed
IGN	137 (Y/BK)	B+ to Main Light Switch
R	14 (BR)	Exterior Lamps Feed
DN	484 (O/BK)	Radio Illumination Feed

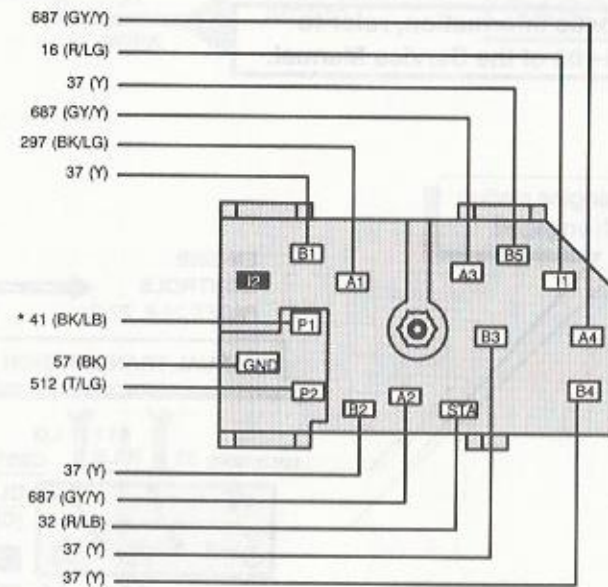

* DIESEL ONLY

C269
IGNITION SWITCH

PIN	CIRCUIT	CIRCUIT FUNCTION
A1	297 (BK/LG)	Hot in ACC or RUN
A2	687 (GY/Y)	Hot in RUN
A3	687 (GY/Y)	Hot in RUN
A4	687 (GY/Y)	Hot in RUN
B1	37 (Y)	Battery Input
B2	37 (Y)	Battery Input
B3	37 (Y)	Battery Input
B4	37 (Y)	Battery Input
B5	37 (Y)	Battery Input
I1	16 (R/LG)	Hot in RUN or START
I2	-	NOT USED
P1	*41 (BK/LB)	Bulb Test (Diesel Only)
P2	512 (T/LG)	Bulb Test
STA	32 (R/LB)	Hot in START
GND	57 (BK)	Ground